




# POWER BOARD

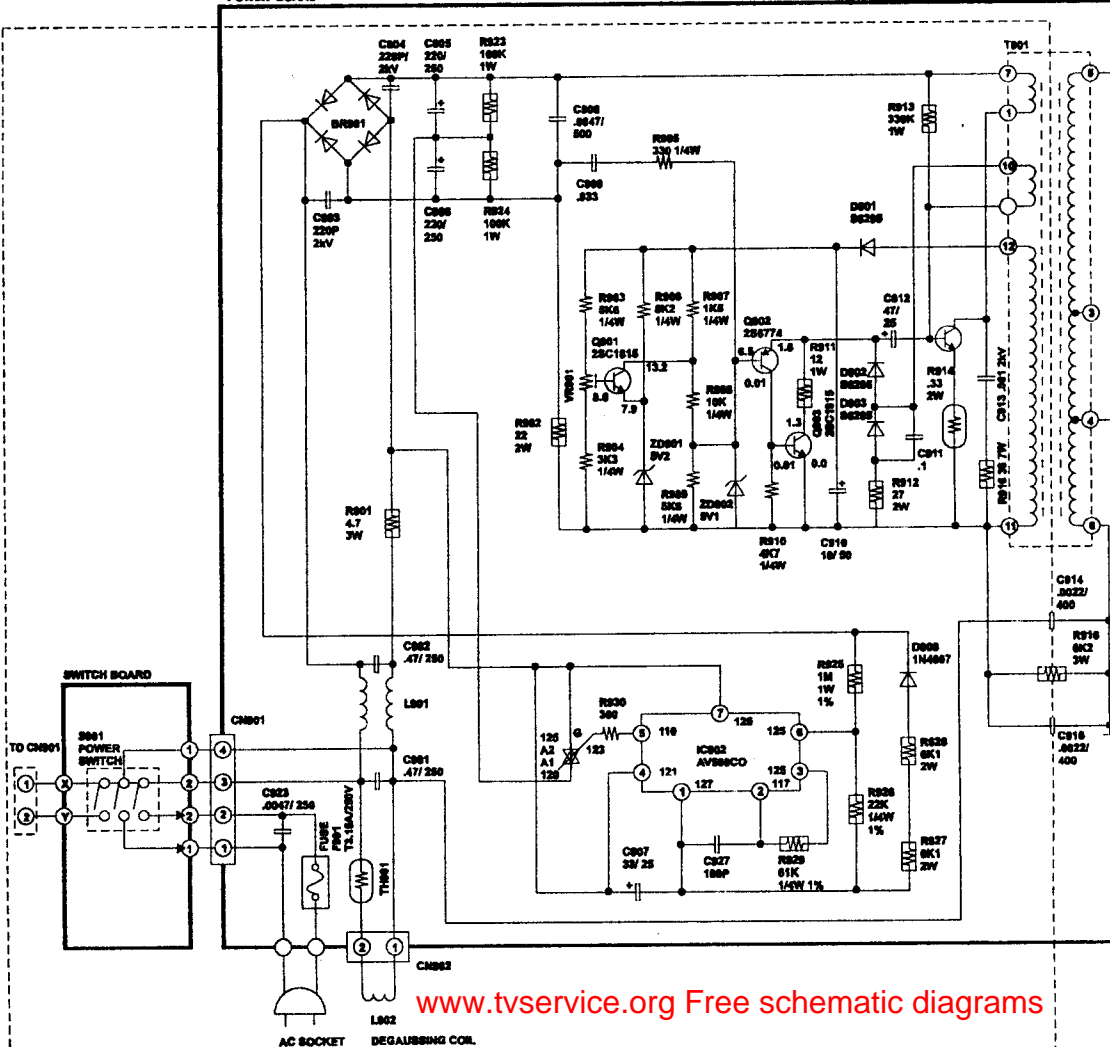

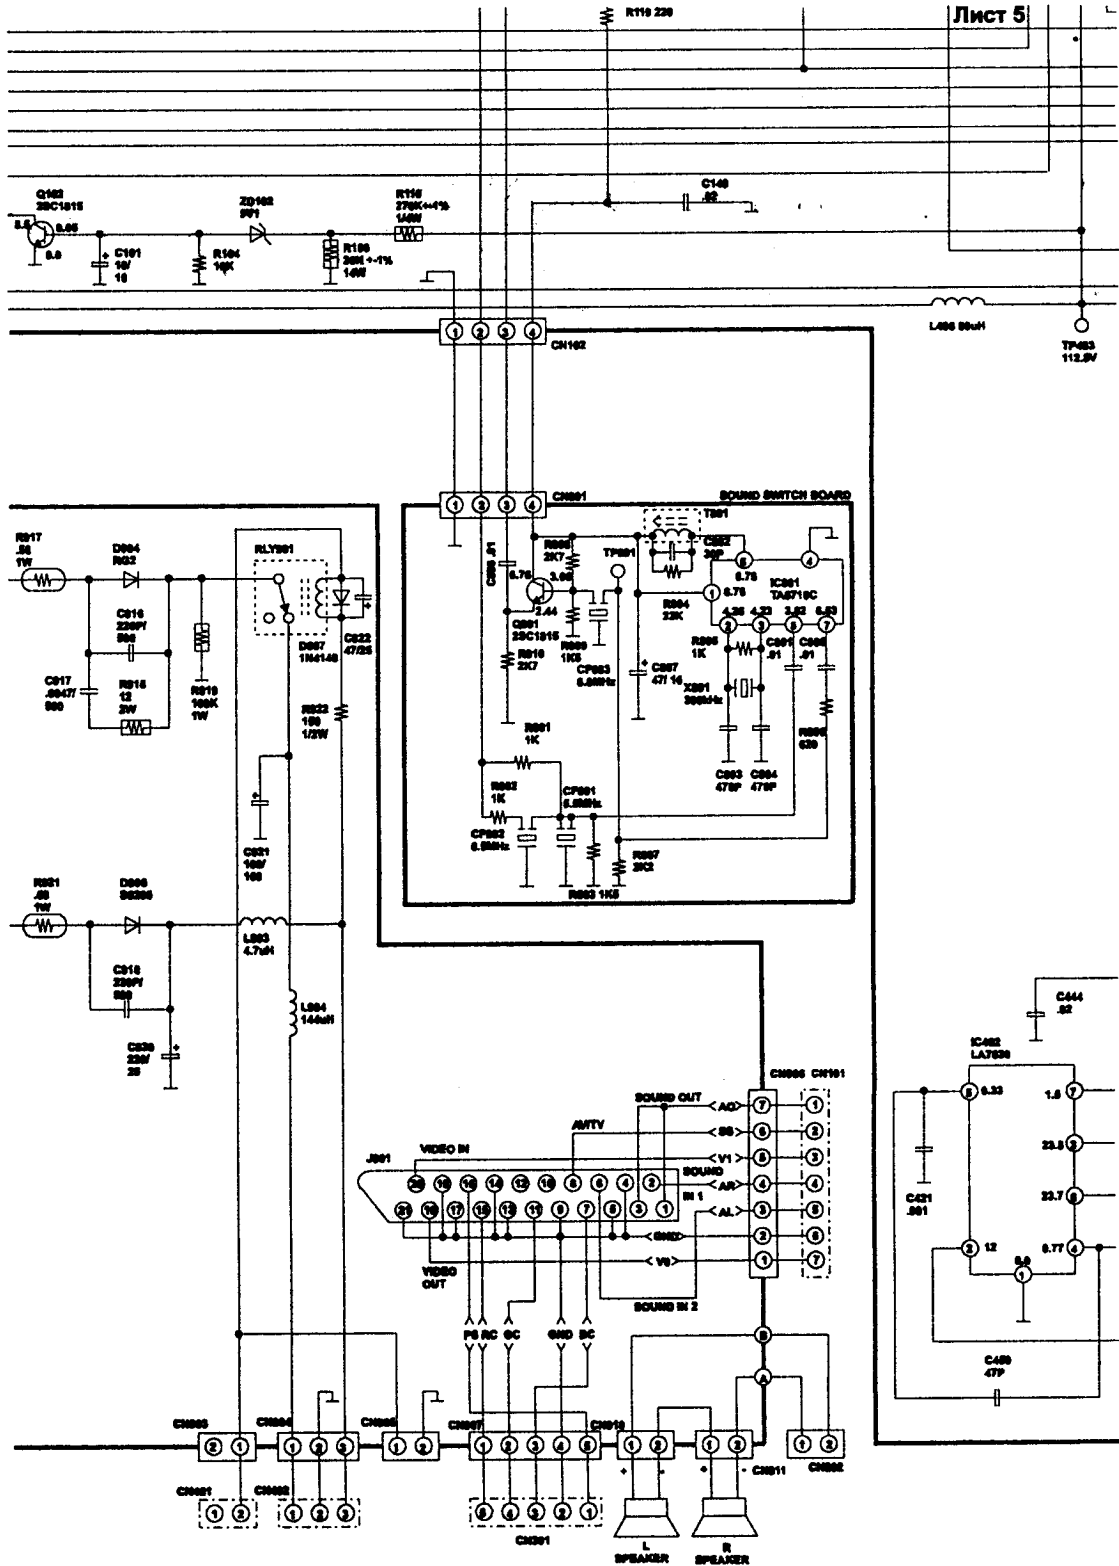

IC302  
AN5601K

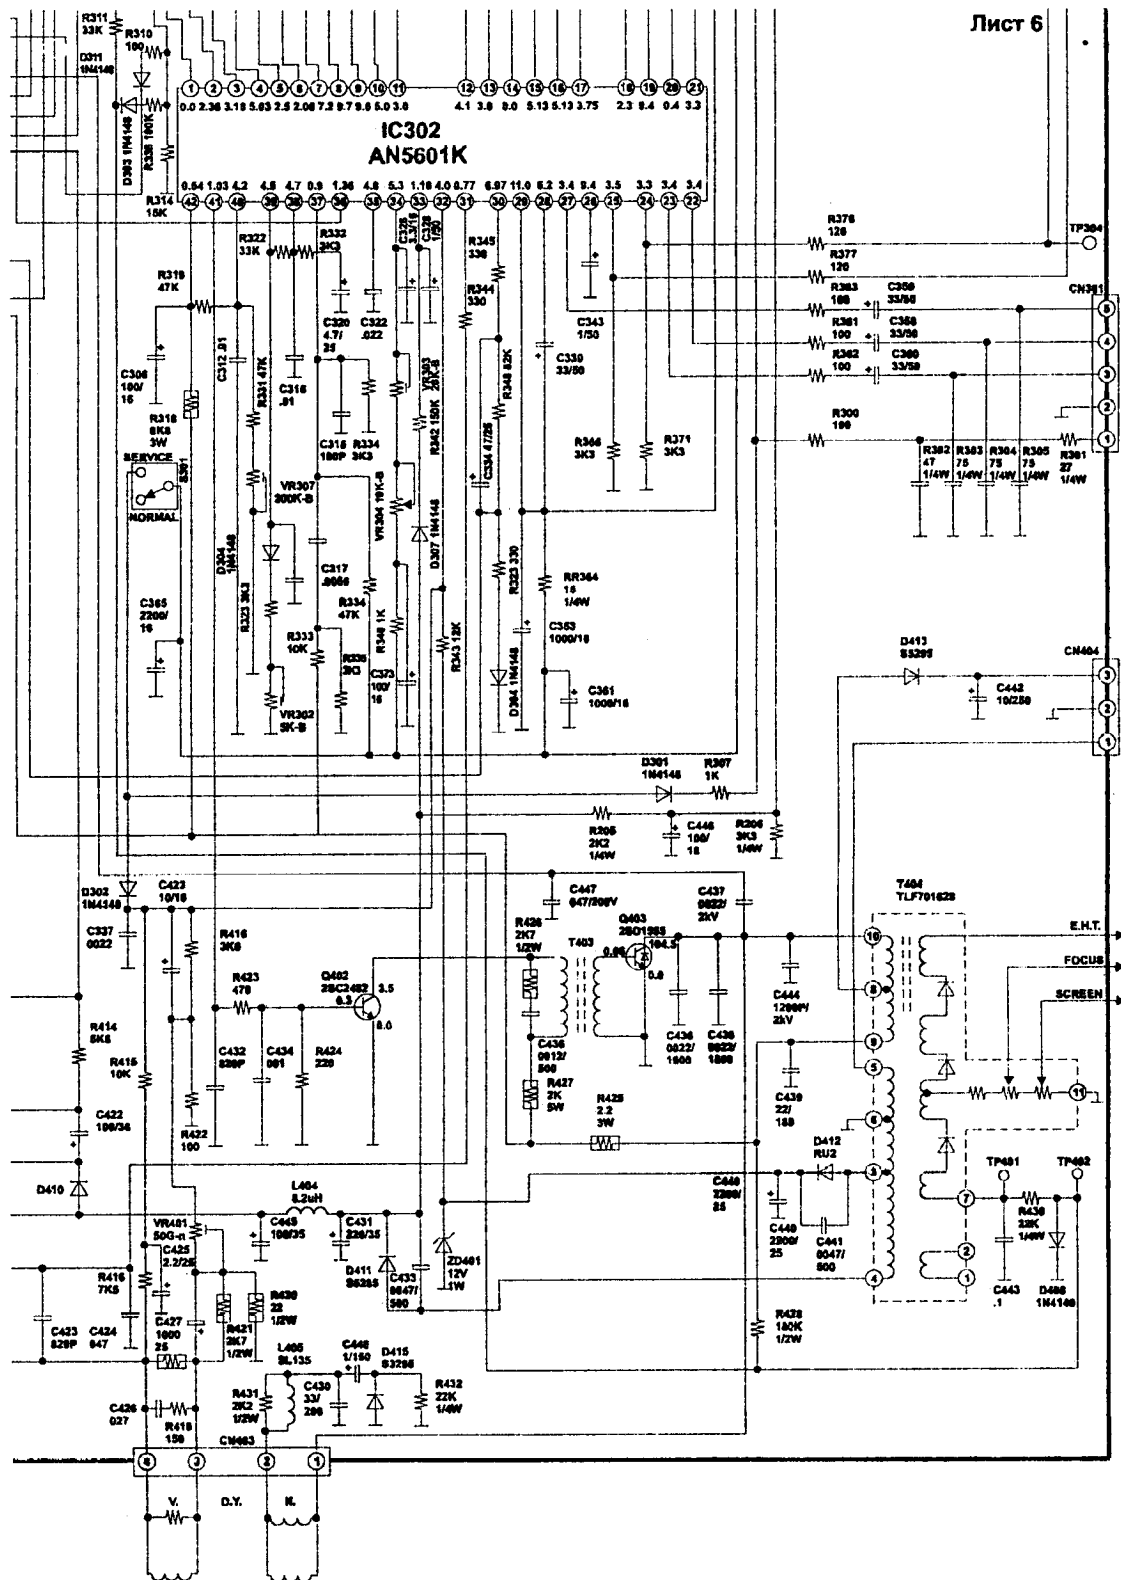


# HANDSET BOARD

## LOCATION COMMANDS

1. 1
2. 2
3. 3
4. 4
5. 5
6. 6
7. 7
8. 8
9. 9
10. 10
11. -
12. -
13. -
14. -
15. -
16. -
17. CHANNEL UP
18. CHANNEL DOWN
19. VOLUME UP
20. VOLUME DOWN
21. STAND BY
22. MUTE
23. TVIAY
24. -
25. SLEEP
26. RECALL
27. -
28. -
29. (+)
30. (-)
31. PIC TUBE

IC701  
TC9012F

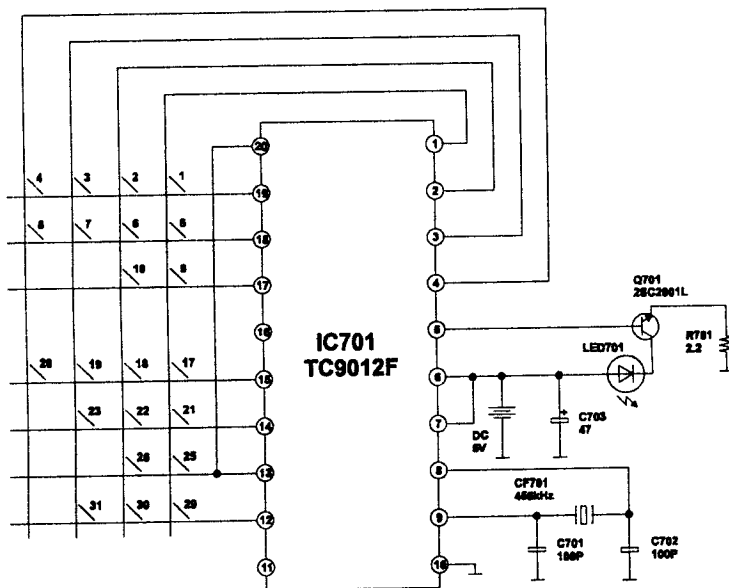

# CRT BOARD

TO CH302

TO E.H.T.

